



**SILENT
KNIGHT**

by Honeywell

IFP-1000 Basic Operating Instructions

These instructions must be framed and displayed next to the IFP-1000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Operation	Keystrokes
Silence alarms and troubles	Press SILENCE then rotate the key or enter a code
Reset alarms	Press RESET then rotate the key or enter a code.
Conduct a fire drill	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. 2. Press 1. 3. Press 1 to select Fire Drill. 4. Press any key to begin the drill. To end the drill, press any key. <p>To conduct a fire drill from a remote fire drill switch: Activate the switch to begin the drill; de-activate the switch to end the drill.</p>
View alarms and troubles	When the system is in alarm or trouble, press ▽ to view location and type of alarm or trouble.
Check detector sensitivity	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. 2. Press 2. 3. Press 2 for Point Status. 4. From the list that displays, use the ▲ or ▽ to select the module you want, then press ENTER. Then key in the point number you want to view and press ENTER. 5. The fourth line of the display shows the sensitivity status. “NORMAL” means the detector is in compliance with NFPA 72. “CAL MAINT” means the detector is in compliance with NFPA 72 but maintenance should be performed soon. “CAL TRBLE” means the detector is not in compliance with NFPA 72.
Set Time and Date	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. 2. Press 4. 3. Make changes in the fields on the screen as necessary. 4. When the time and date are correct, press ENTER.
Enable / Disable point	<ol style="list-style-type: none"> 1. Rotate the key or enter a code then press ENTER to access the menu. 2. Press 2 for Point Functions. 3. Press 1 for Disable / Enable point. 4. Press 7 for Disable / Enable point. 5. From the list that displays, use the ▲ or ▽ to select the module you want, then press ENTER. Then key in the point number you want to disable or enable and press ENTER. 6. Press ▶ to toggle the point between NORMAL (enabled) and DISABLE.
View event history	Rotate the key or enter a code then press ENTER to access the menu, then press 3 to select Event History. Events will display in date order, with most recent events displaying first.